

ACTIVESHOP[®]

INSTRUCTIONS FOR USE

iWax wax warmer 100W



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, building
DC2A 54-610 Wrocław,
Poland

www.activeshop.com.pl


Rev. A/01/2025



Technical data:

Power	100W
Voltage	220-240V, 50Hz
Capacity	500ml
Temperature control	35°C-125°C
Time settings	1min-99min
Dimensions	20.2 x 20.2 18.8cm

Construction:

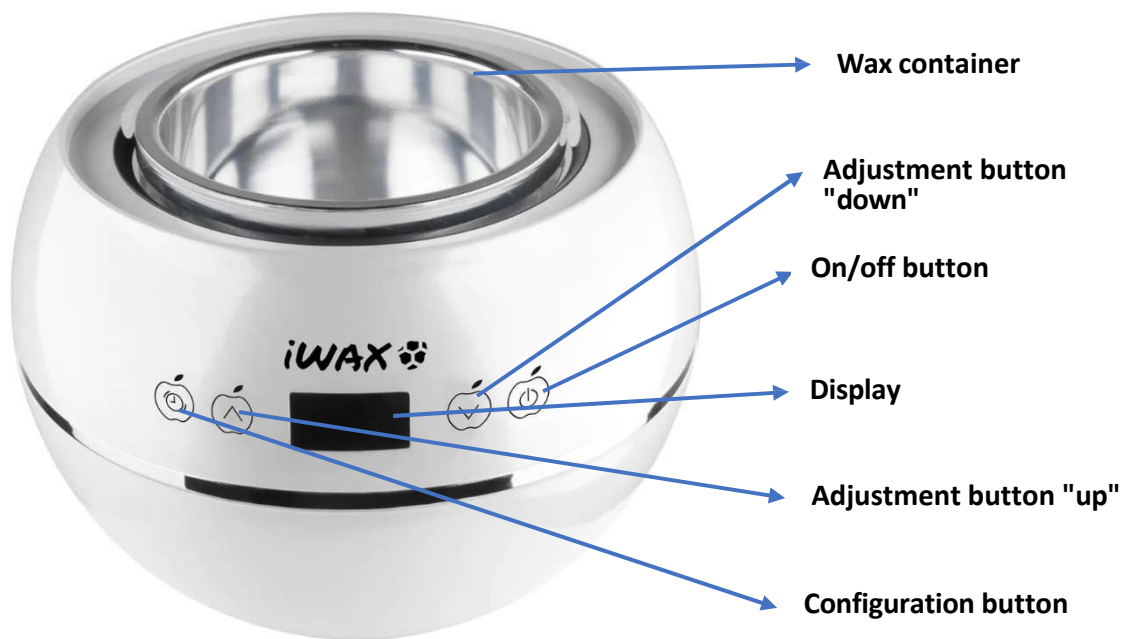

Operation of the device:

- **Switching on/off-** Press button "on/off" to start the device, you will hear short signal beep. Press button again "on/off" to turn off device, you will hear 3 signals beeps.
- **Setting the temperature-** Press the "up" button to increase the temperature or press the "down" button to decrease the temperature. After 1 second, the display will appear current temperature of the heater.
- **Changing the operating time-** Press the configuration button, "h30" will appear indicating 30minutes. Then use "up" and "down" buttons to set the desired working time in minutes and confirm with configuration button. **Note:** During timer mode, the default operating temperature is 70°C!
- **Change unit-** Hold down the configuration button to change the temperature unit from °C to °F.

Usage:

1. Place the can of wax in the heater and put the lid on.
2. Connect device to current and set the selected temperature. (NOTE: The maximum temperature can be set only to warm up the wax. Once the wax is semi-liquid, change the temperature to the temperature recommended by the wax manufacturer)
3. When the wax has melted, turn off the heater with the "on/off" button and then unplug.
4. Before applying the wax to the skin, make sure the wax is not too hot to avoid burning.
5. Clean your skin before epilating, your skin should be dry and clean.
6. Apply the wax with a stick to the skin along the direction of the hair.
7. Then stick the depilatory paper on the wax-covered skin.
8. Tear off the depilatory paper in a decisive motion opposite the direction of the hair.
9. After epilating, apply a post-epilation oil or oil that soothes irritation and redness, removes wax residue and moisturizes the skin.
10. Make sure the device is turned off and unplugged.

Cleaning the device:

1. Do not use solvents or strong cleaning agents.
2. Always unplug the device before cleaning.
3. Do not soak the device in water.
4. Do not use sharp objects for cleaning.
5. You can use a special liquid to remove wax residue.

Set includes:

1. Power cord.
2. Heater base.
3. Wax container with handle
4. Lid

SAFETY PRECAUTIONS

1. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
2. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
3. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
 - a) Liquid has gotten into the device, b) the device emits a strange odor, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
4. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
5. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
6. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.

7. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
8. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
9. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device, damage or even burning.

CAUTION!

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk, or lead to death, so keep it out of the reach of children.

DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow in accordance with rules for disposal of this type of

equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately, and sent to collection centers for waste electronic and electrical equipment. At the end of their useful life, as well as old appliances containing full-value recyclable components, so they should be sent for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place and a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.